



Nozzle holders complete with **FLOW STOP 2** valve easily adapt to the installer's positioning requirements: the 360° rotation of the valve facilitates the installation of the rigid pipe.